


# nannidiesel

energy in blue

English

Base  
Kubota

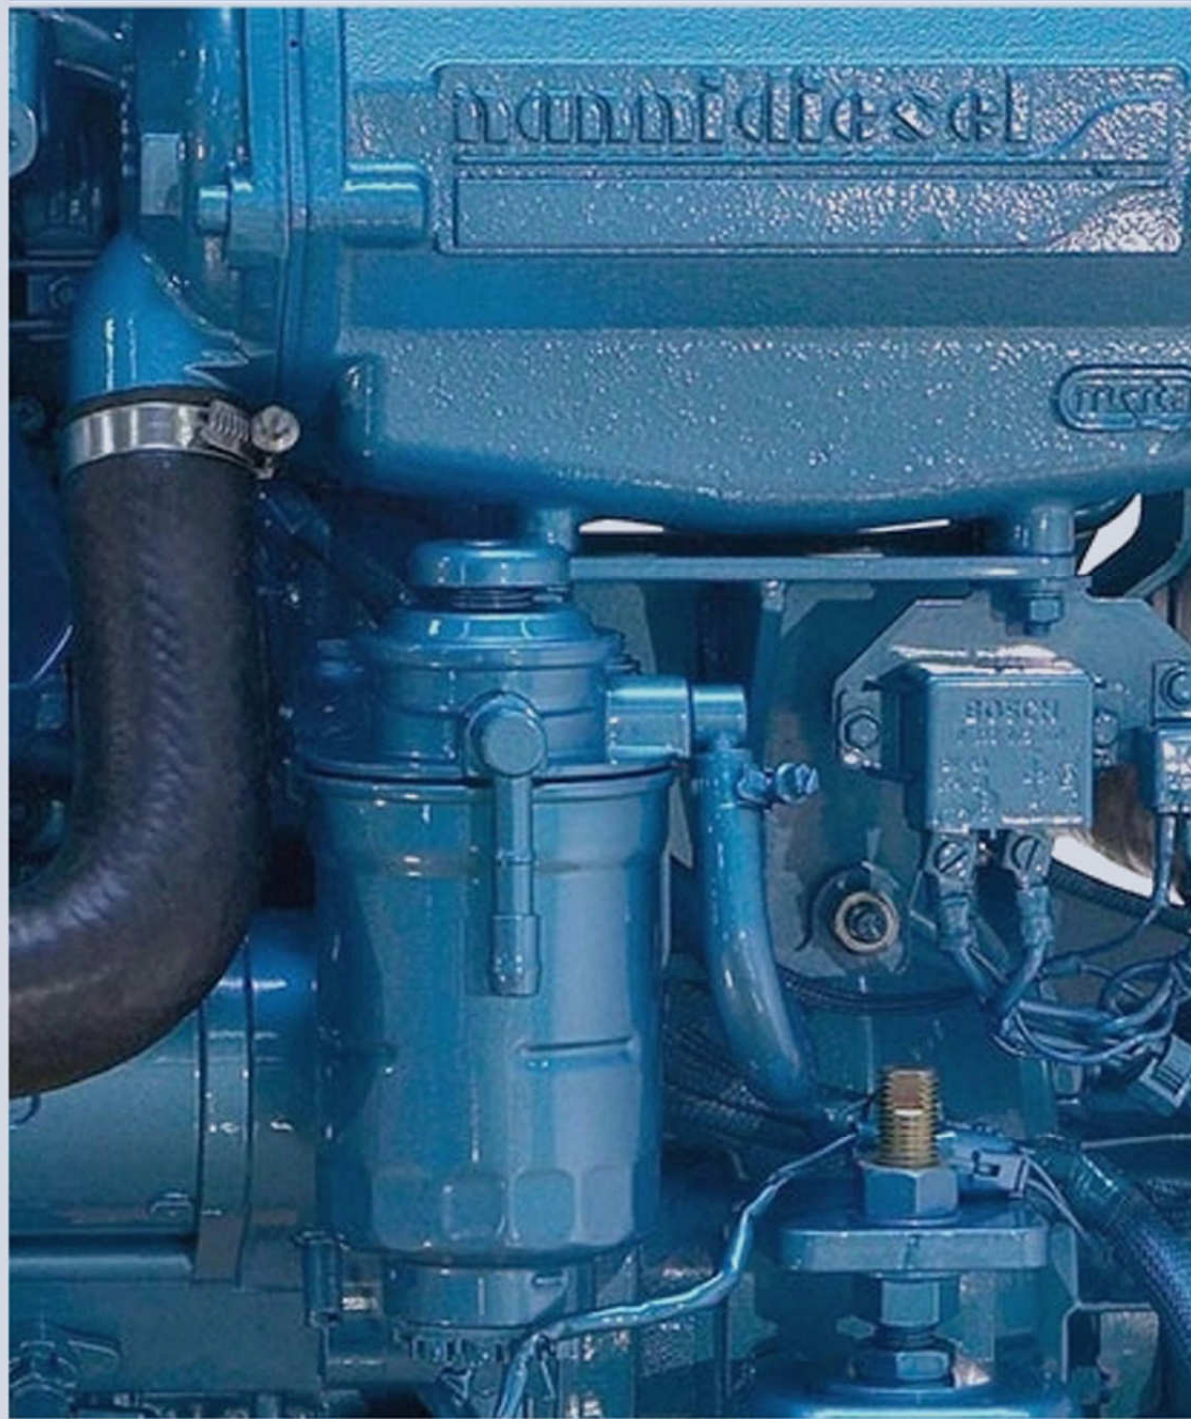

Reference : 970 313 238

Date : 10/2007

Indice : A

# N2.14

This photograph does not necessarily represent the engine

**Engine specifications**

Cycle	4 strokes, Diesel
Number of cylinders / Arrangement	2 in line
Bore / Stroke	67 mm x 68 mm
Displacement	0,479 litres
Distribution	2 valves, gears
Compression rate	23/1
Intake	Atmospheric
Direction of rotation (from flywheel)	Counter clockwise
Weight dry with gearbox	92 kg
Max. power*	10,3 kW (14 hp)
Rated rpm speed*	3600 rpm
Idle rpm speed	1050 rpm
No load rpm speed	3820 rpm
Specific fuel consumption	285 g/kW/h at 3600 rpm

**Fuel supply**

Injection	Indirect (E-TVCS)
Injection order	1-2
Injection timing	20° at 22° before PMH
Injection pump	BOSCH MD Mini type
Injection pressure	13,7 MPa

**Lubrication**

Engine oil	API CD-SAE 15W40 (temperate climat)
Engine oil capacity	1,9 litres

**Cooling**

Cooling	Dual circuit sweet water / sea water with heat exchanger or by " keel cooling"
Seawater pump	Neoprene rotor type
Coolant for heat exchanger version	Around 2,7 liters, 50% water + 50% mixture of antifreeze and anti-corrosion agents

**Electrical system**

Alternator	12 V / 70 A
Alternator belt tension	Deflection 8 mm at 5 daN
Battery capacity (min.)	100 to 110 A/h

**Connections**

Exhaust	40 mm
Fuel (suction and return)	8 mm
Seawater	20 mm
Max. mounting angle	15° (dynamic)


 These specifications are for marine pleasure only.

\* For more information concerning your transmission, refer to its specific manual.

*The recommended cruise speed is 200 rpm below rated RPM speed.*

\*At engine flywheel, according to ISO 8665-1.

## Maintenance schedule

 Refer to the maintenance and servicing section in the manual for information on the regular servicing checks and operations to be performed.


Operation : Control, Adjust, Clean, Replace

Information given in italics refers to equipment not necessarily forming part of your engine.

*Gearbox (refer to specific manual for this component)*

Subset	Component	Operation	Frequency
Fuel supply	Fuel filter	<b>R</b>	After 20 hours then every 100 hours or every year
Exhaust elbow	Zinc anode	<b>I / R</b>	
Engine block	Tension of belts	<b>R</b>	
	Tightening of attaching parts and clamps	<b>I / A</b>	
Control unit	Cables accelerator / reverse, Trolling, General lubrication	<b>I</b>	
Fuel supply	Air filter (cleaning kit)	<b>I / C / R</b>	Every 200 hours or every year
Cooling	Seawater pump rotor	<b>R</b>	
Electrical system	Starter (attachment)	<b>I / A</b>	
	Alternator (attachment)	<b>I / A</b>	
Engine block	Cleaning and protection of engine	<b>I / A / C</b>	Every year
Fuel supply	Fuel pre-filter (cartridge)	<b>R</b>	After 20 hours then every 200 hours or every year
Engine block	Attachment of engine suspensions / alignment	<b>I / A</b>	
Electrical system	Battery	<b>I</b>	
Lubrication	Engine oil (change)	<b>R</b>	
	Engine oil filter	<b>I / A / R</b>	
Cooling	Cooling circuit (rinsing)	<b>C</b>	Every 2 years
Fuel supply	Adjustment of valve clearance	<b>I / A</b>	Every 400 hours or every 2 years
	Calibration of injectors	<b>I / A / R</b>	
Cooling	Coolant change	<b>R</b>	
	Exchanger manifold or keel cooling	<b>I / C</b>	
	Calibrated plug of temperature exchanger	<b>R</b>	
	Thermostat	<b>R</b>	

## Oil level

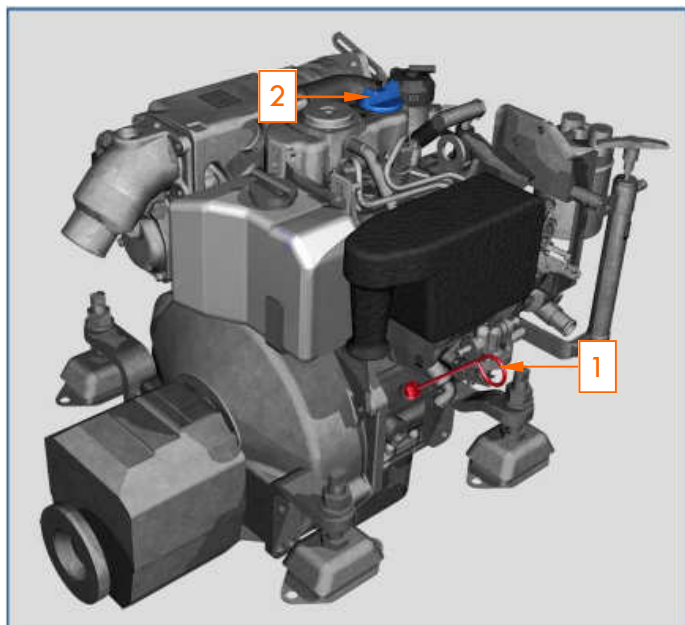


- 1 - Oil gauge
- 2 - Oil filler port

**⚠** *The oil checks must always be performed with the engine stopped and cold. Be careful, these fluids are flammable. Do not smoke in the vicinity of these fluids and do not allow for any sparks or flame in the vicinity.*

Engine casing oil: remove the gauge, wipe off the gauge and reinstall it in the gauge tube. Pull out the gauge again and check the oil level. It should be located between the min. and max. positions on the gauge.

If necessary, top up the oil level: open the air filler port, pour the recommended oil (see technical characteristics in appendices) to reach the max. level indicated on the gauge without exceeding the max. level. Close the oil filler port.

## Coolant level

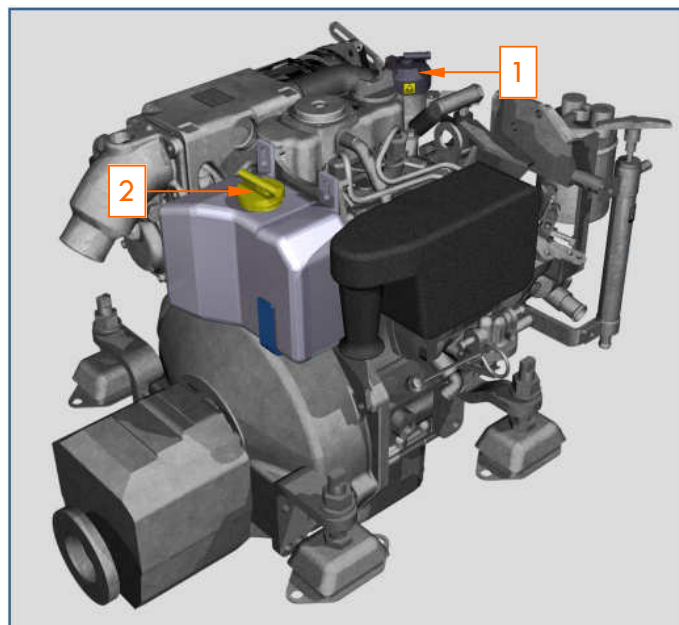

- 1 - Coolant plug
- 2 - Expansion tank


**⚠** *When filling the cooling system, the coolant level must be checked after 10 minutes of use since the system purges itself automatically. Top up if necessary.*

Turn the filler plug up to its first stop to allow the pressure in the system to escape before removing the plug.

Inspect the fluid level. The level should be between the lower edge of the filler neck and the level pin (if equipped), respectively representing the minimum and maximum level in the expansion chamber.

Top up if necessary using a fluid comprising 50% water and 50% antifreeze.


## Alternator belt

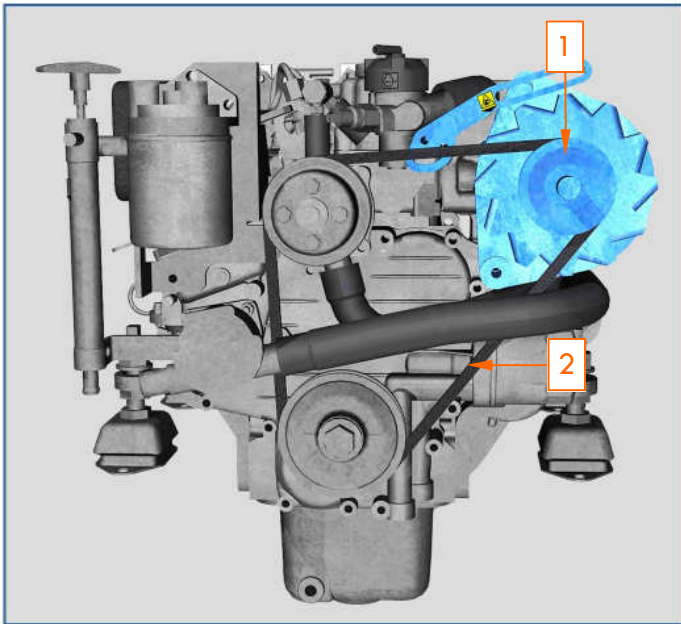


- 1 - Alternator
- 2 - Alternator belt

**⚠ Perform this operation with the engine stopped.**

Regularly check the tensions of the alternator belt. Tension the belt between the pulleys in accordance with the tension or deflection given in the technical characteristics (appendices pA-2) using a DENSO meter.

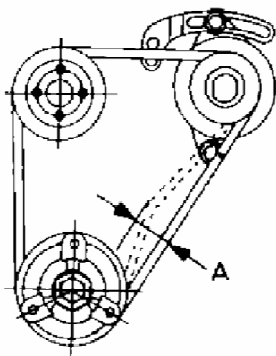

## Zinc anode

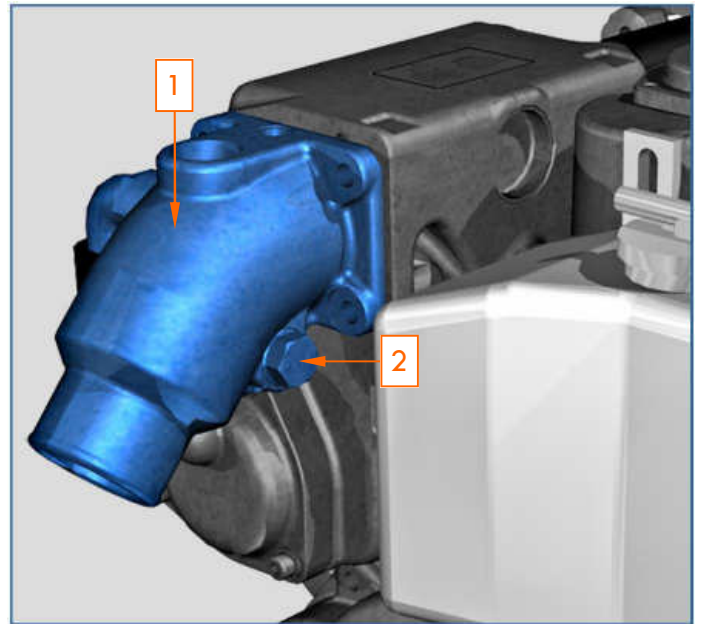

- 1 - Exhaust elbow
- 2 - Zinc Anode

**⚠ Perform this operation with the engine stopped and cold.**


A zinc anode forms part of the exhaust elbow. It serves as an anticorrosion anode. The anode must be replaced when more than 50% of it has been consumed.

Diameter : 10 mm

Length : 16 mm

*Non-binding photographs. The coupled equipment and accessories can vary according to your level of equipment.*

## Air filter

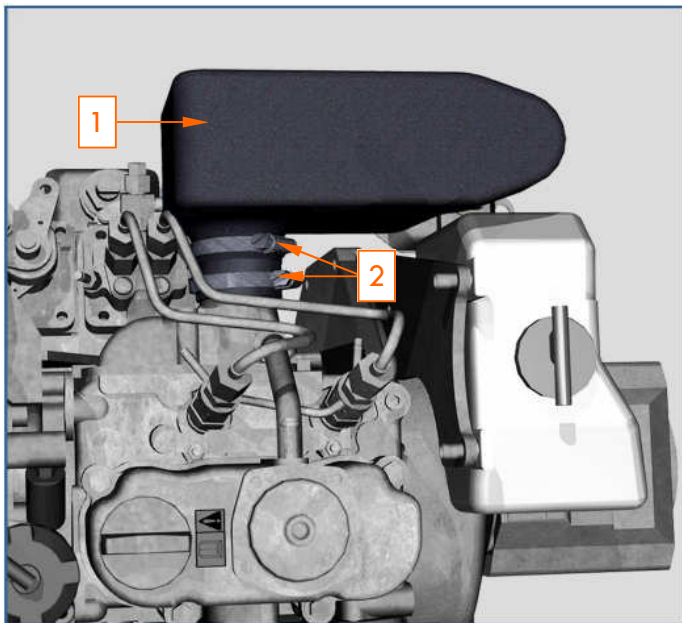

- 1 - Air filter
- 2 - Clamp


**⚠ Be sure no impurities get into the engine.**

Remove the clamp from the hose and remove the filter. Remove the spring inside the filter. If necessary, clean the filter by washing it with soapy water. Then, rinse the filter with clear water. Press the filter to remove any water and to dry it.

NANNI DIESEL has designed a cleaning kit which is suited to certain models of the air filter.

Use of this kit is recommended on our engines to perform effective cleaning and ensure good engine « breathing ».

## Fuel filter

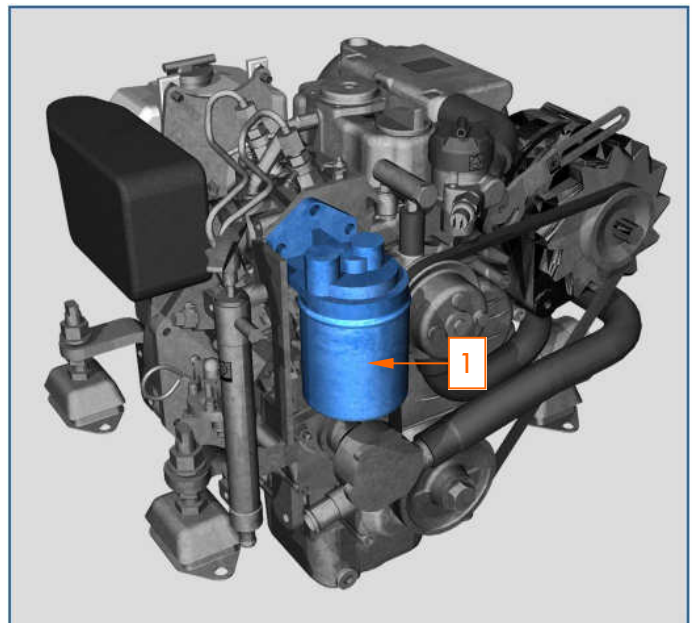


- 1 - Fuel filter cartridge

**⚠ Always sponge up any fuel which may have spilled Observe the environment protection rules.**

The fuel filter is a throw-away type filter. The fireguard envelope and the water probe must be preserved and reinstalled correctly (if equipped). The fire guard must not come into contact with the plastic purge screw.

- Close the fuel valve
- Unscrew the cartridge from the filter head
- Coat the seal of the new cartridge with clean oil
- Screw the new cartridge on the filter head, then tighten by hand by  $\frac{3}{4}$  turn (do not use a tool).
- Reinstall the probe and the purge screw (if equipped). Check the seal
- Open the fuel valve
- Purge the circuit
- Start up the engine and check for any leaks

## Sea-water pump

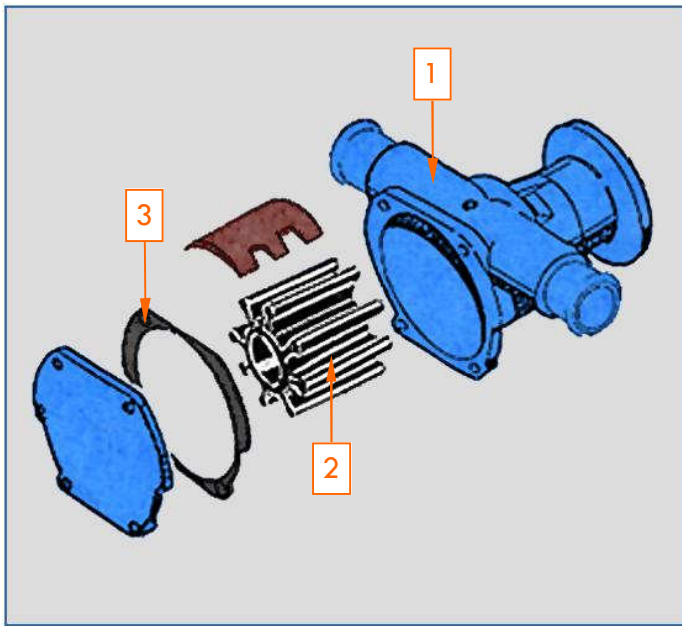


- 1 - Sea-water pump
- 2 - Impeller
- 3 - Sea-water pump gasket

**⚠** *Close the seawater intake valve as there is a risk of water penetrating into the engine.*

- Close the seawater intake valve
- Close the seawater pump cover
- Using a channel lock pliers, remove the worn Impeller
- If the rotor shows any signs of cracks or defects, it should be replaced
- Clean the parts preserved
- Fit a new rotor by applying a clockwise rotary movement
- Install the seawater pump cover using a new seal
- Open the seawater intake valve
- Start-up the engine and check for any leaks in the circuit

## Engine oil drain

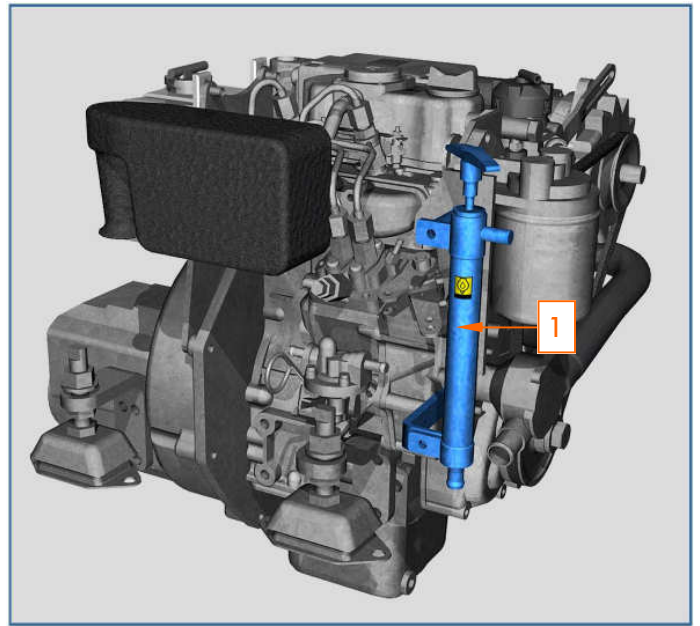


- 1 - Oil drain pump

**⚠** *Hot oil can burn. Avoid any contact with the skin. Observe the environment protection rules.*

- The oil is removed using a drain pump, preferably: engine slightly warm
- Fully pump out all the oil
- Fill with new oil
- Check the oil level using the gauge
- Do not exceed the maximum level

*Non-binding photographs. The coupled equipment and accessories can vary according to your level of equipment.*

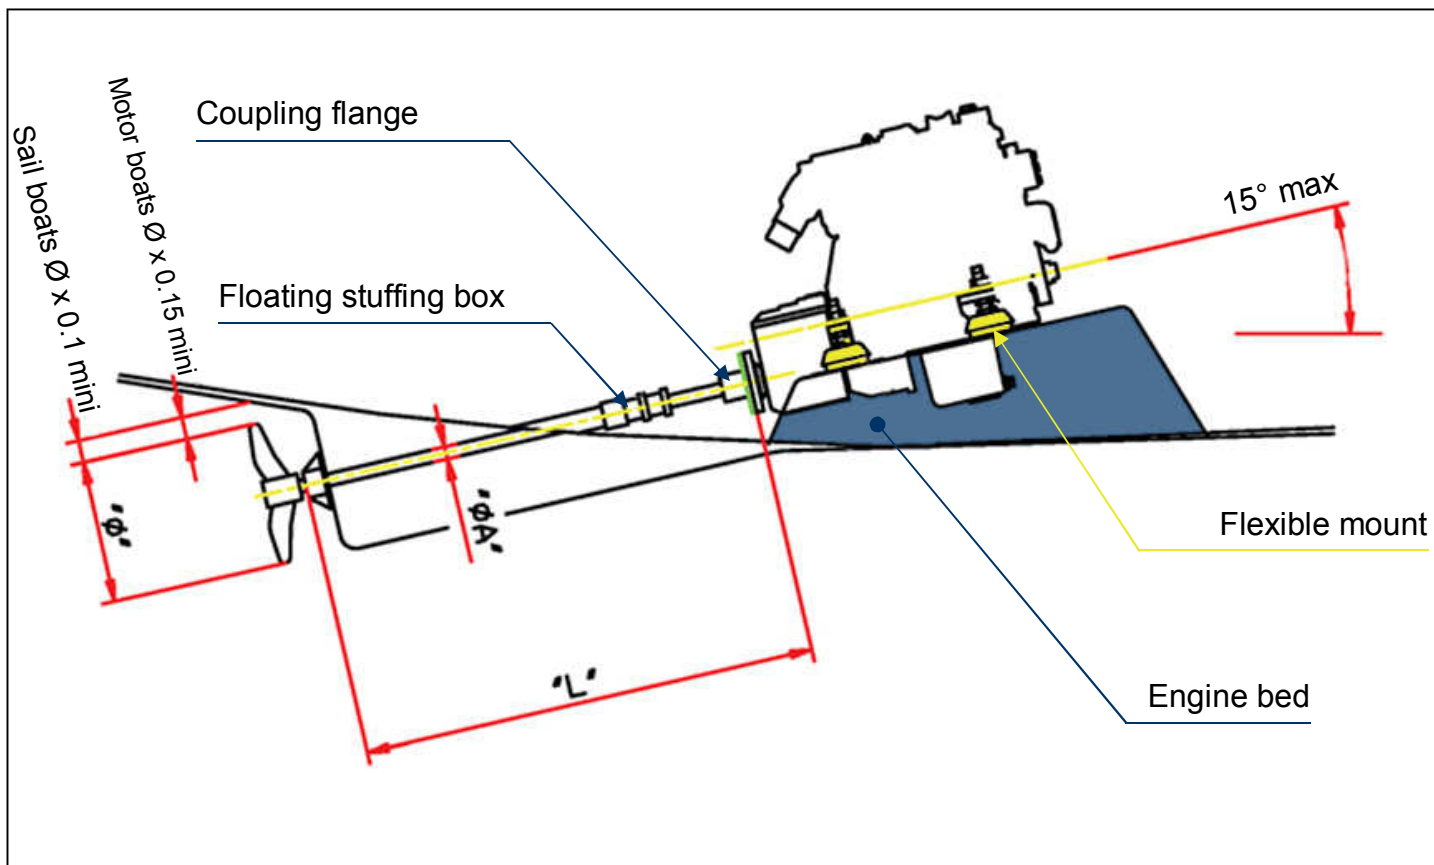

**Engine bed**

Rigid structure able to absorb all the dynamical stress, and the engine weight. It must be linked to the hull with a surface as large as possible.


Engine	Reduction ratio	ØA (mm)	Ø* (inches)	L** (meter)	Engine RPM		
					Idling	Maxi rated load	Maxi without load
N2.14	2	22	12/13	1.20	1050	3600	3820
	2.6	22	14	1.40			

\* For propeller calculation please fill in in the "propeller study" form

\*\* Maximum value accepted




## Fuel connections

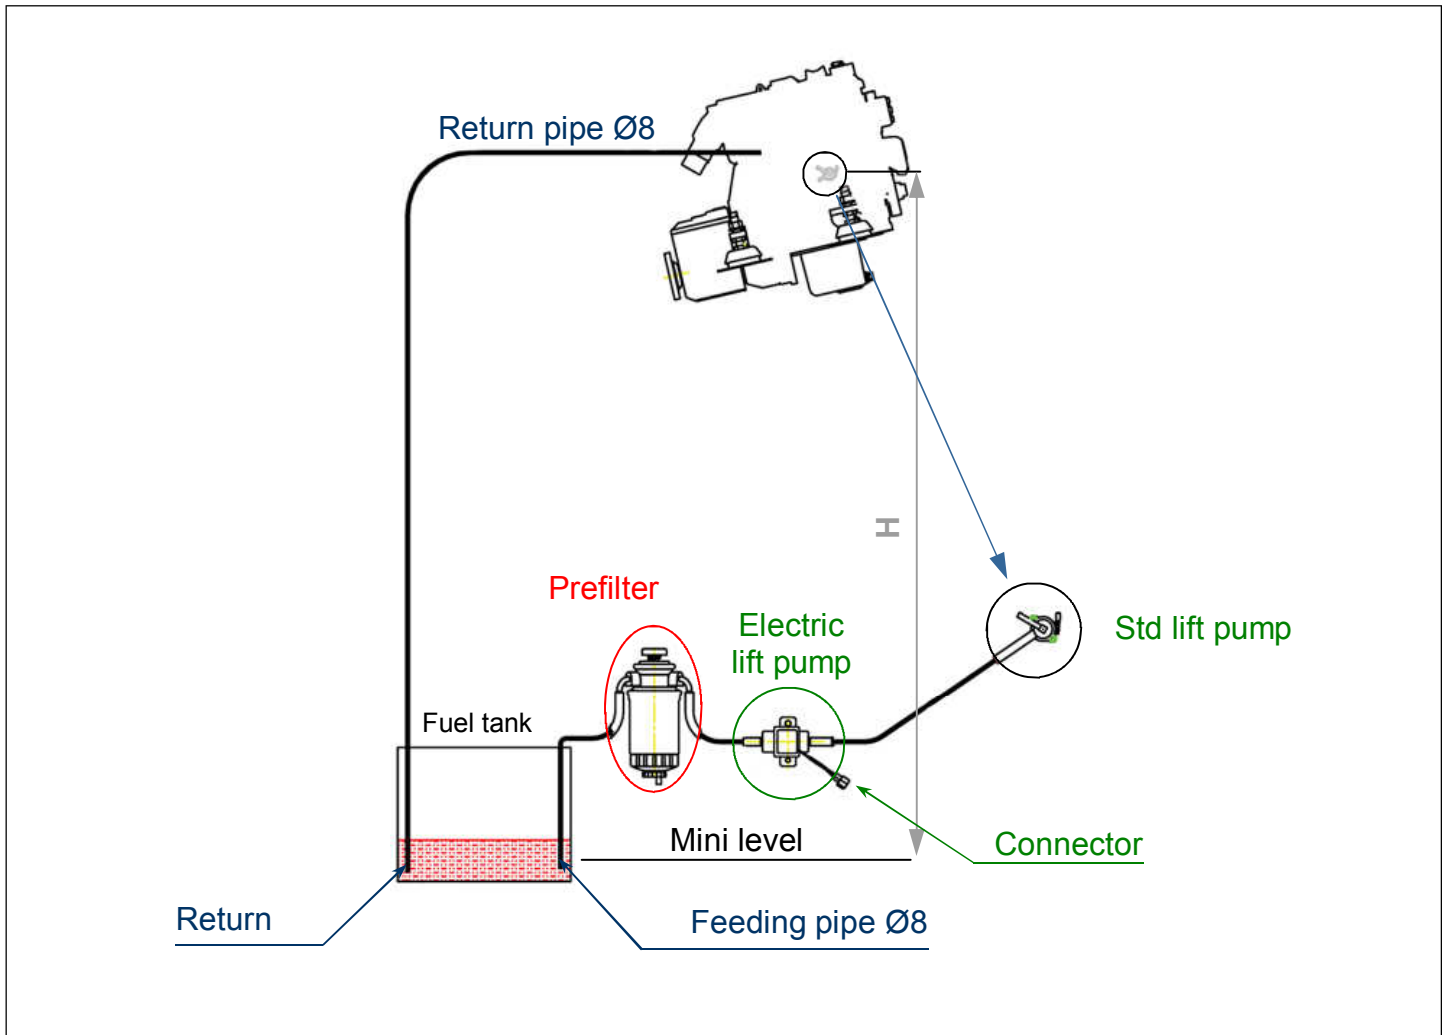

- Prefilter has to be as low as possible
- The return to tank must be below the mini fuel level
- The electric lift pump is optional.  
Connector : +12V to key switch P.15/54, protect with fuse 1.5A


Pump	H maxi (meter)
Standard	0.5
Electrical	1.8

**Engine under waterline**

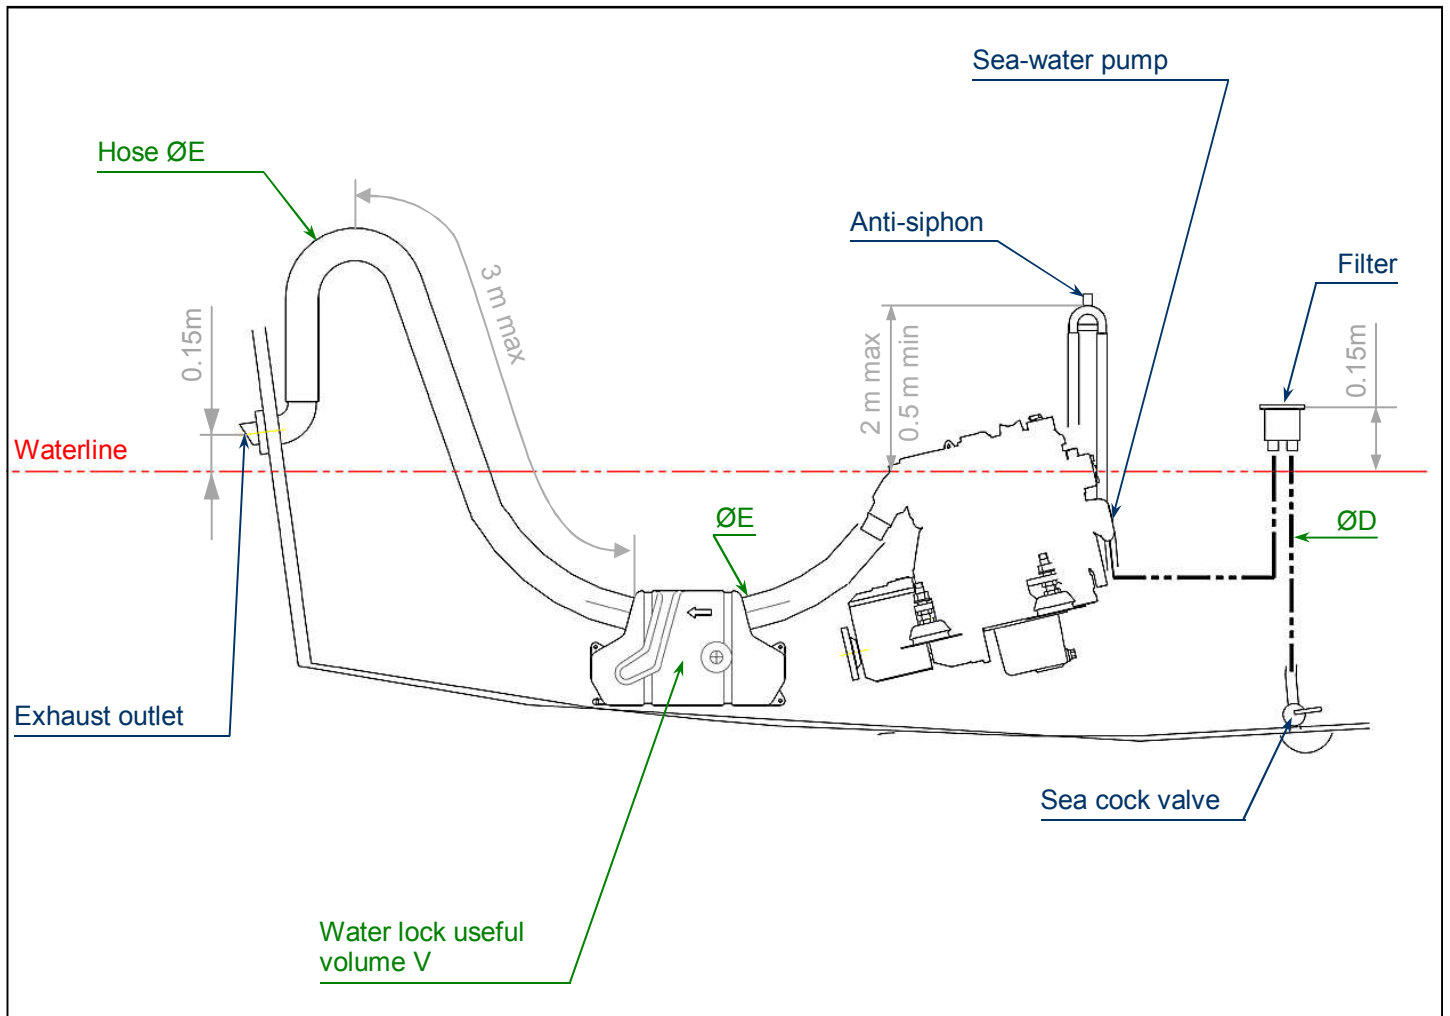

Engine	$\text{ØD}$ (mm)	$\text{ØE}$ (mm / inches)	Max back- pressure (kPa / PSI)	V mini (litre)
N2.14	20	40 / 1.57"	10.5 / 1.523	5

## Engine above waterline

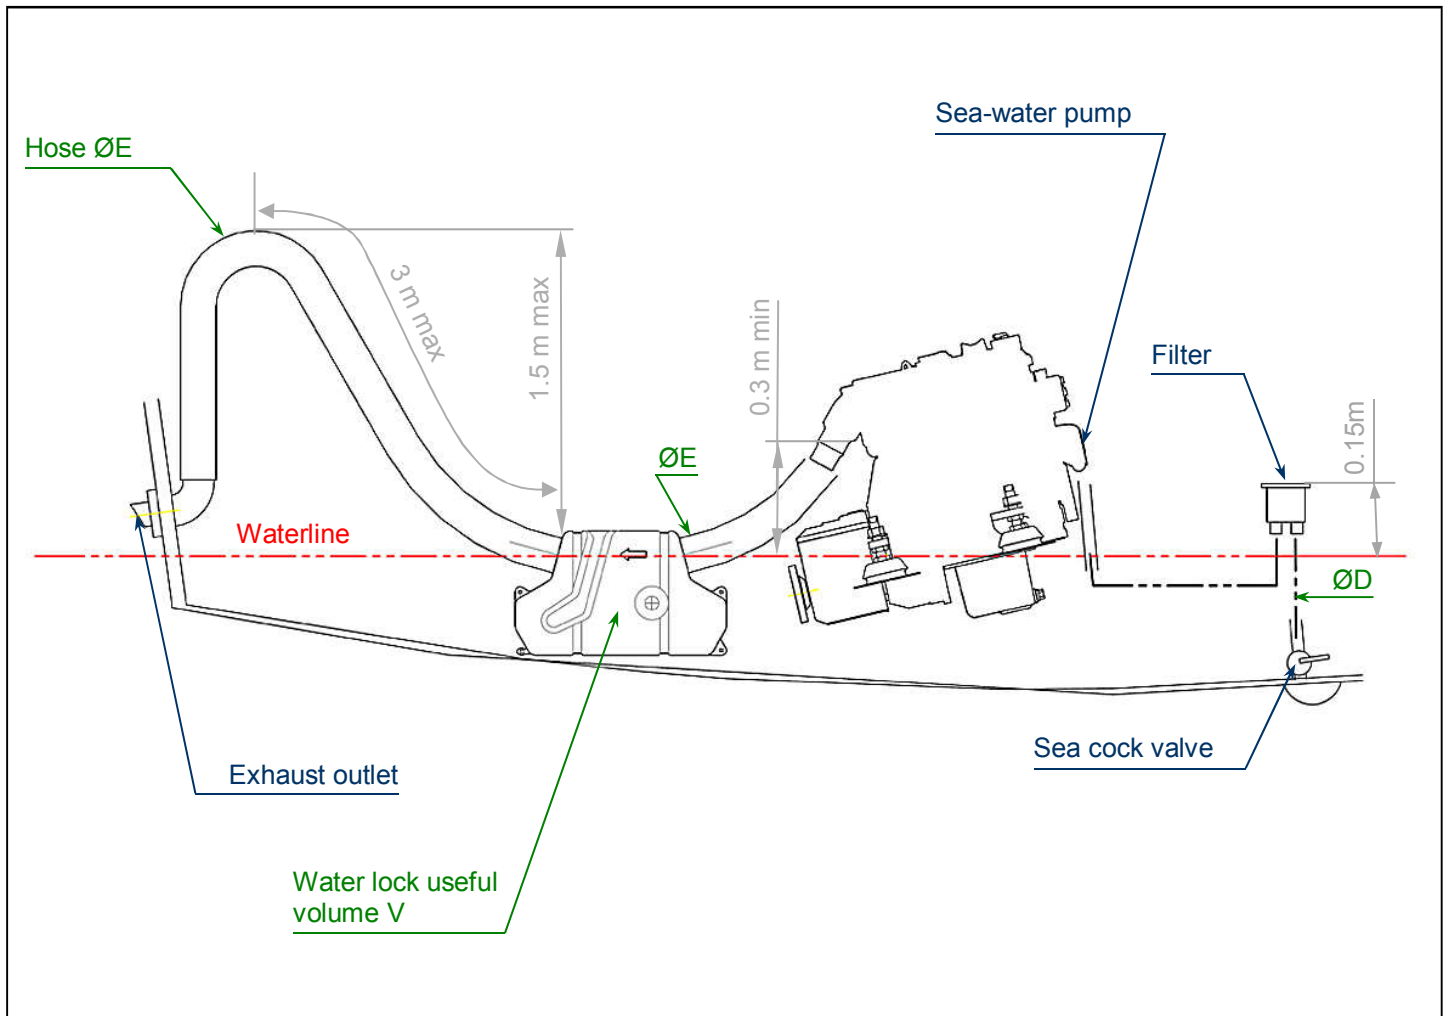

All sail boat



### Anti siphon valve

Must be at the end of raw water piping before exhaust elbow inlet

### Water lock


Must be always lower and near the engine

Motor boats



**Dynamical system**

---

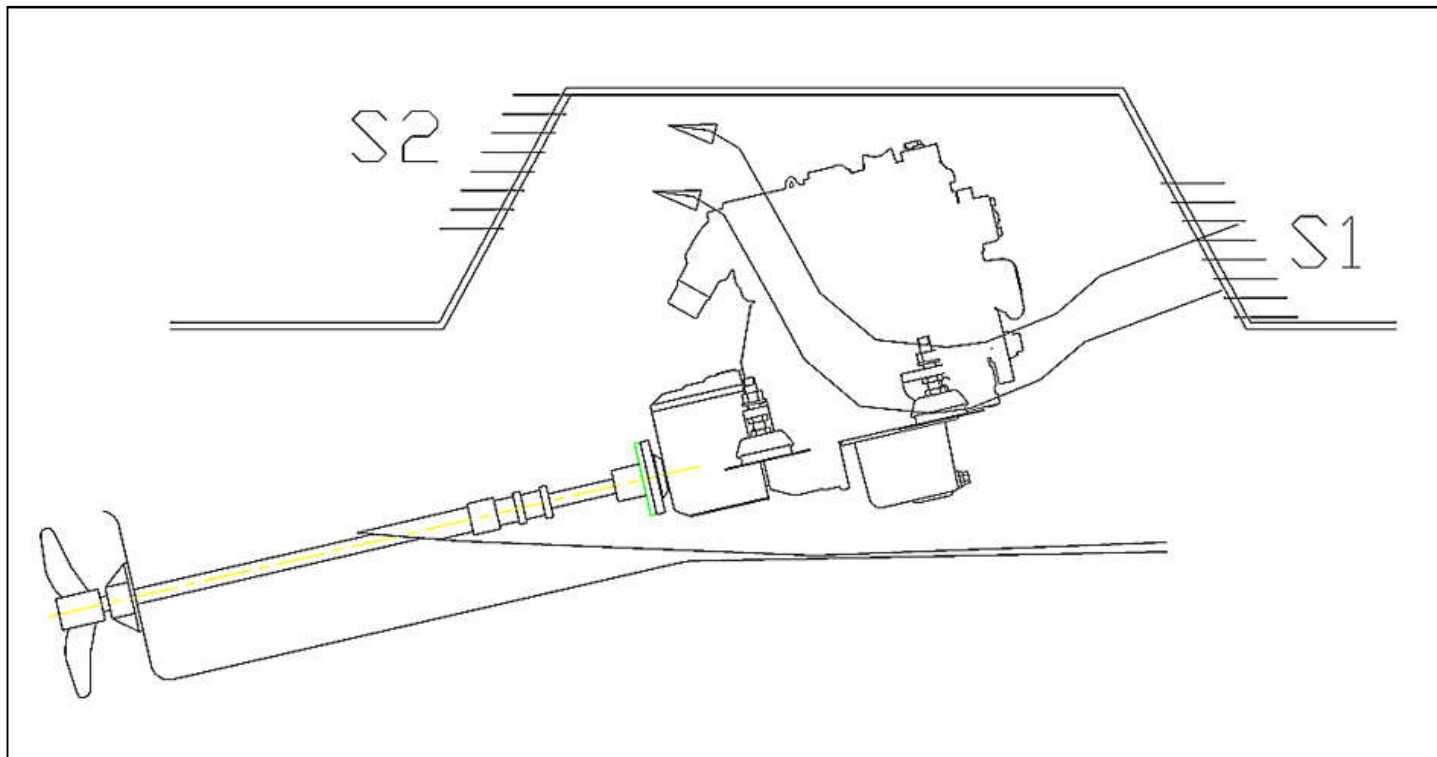

Engine	Engine air Consum. (m <sup>3</sup> /min)	Inlet S1 (cm <sup>2</sup> )	Outlet S2 (cm <sup>2</sup> )
<b>N2.14</b>	0.7	110	40

**Engine room temperature**


Nor more than 50°C with a difference of 15°C (20°C maxi) with ambient temperature.

**Air flow**

Fresh air inlet, on the front in the lower part of the engine room and warm air outlet on the back in the upper part.


Avoid short-circuit between inlet and outlet in order to have a maximum air move.

## Eco3 / A3 / B3 panel


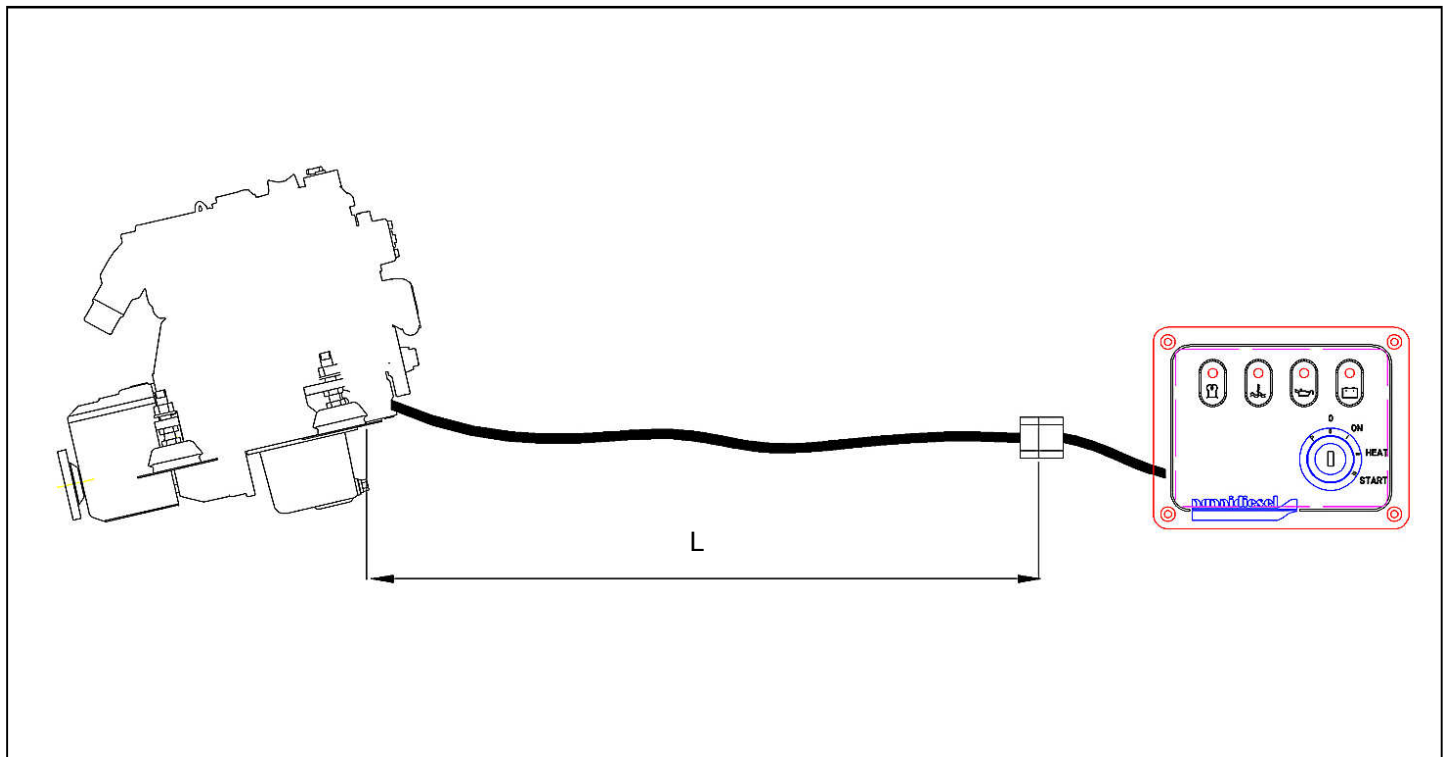



Connector	
1	+
2	-
3	Starter
4	Preheating
5	Stop
6	Oil sender
7	D+
8	Oil switch
9	Water switch
10	Water sender
11	Revolution counter (tachometer)

Extension references		
L =	2 meters	970 304 162
L =	4 meters	970 302 665
L =	8 meters	970 302 666

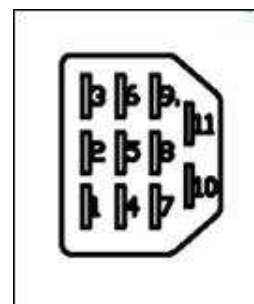

Non-binding photographs. The coupled equipment and accessories can vary according to your level of equipment.

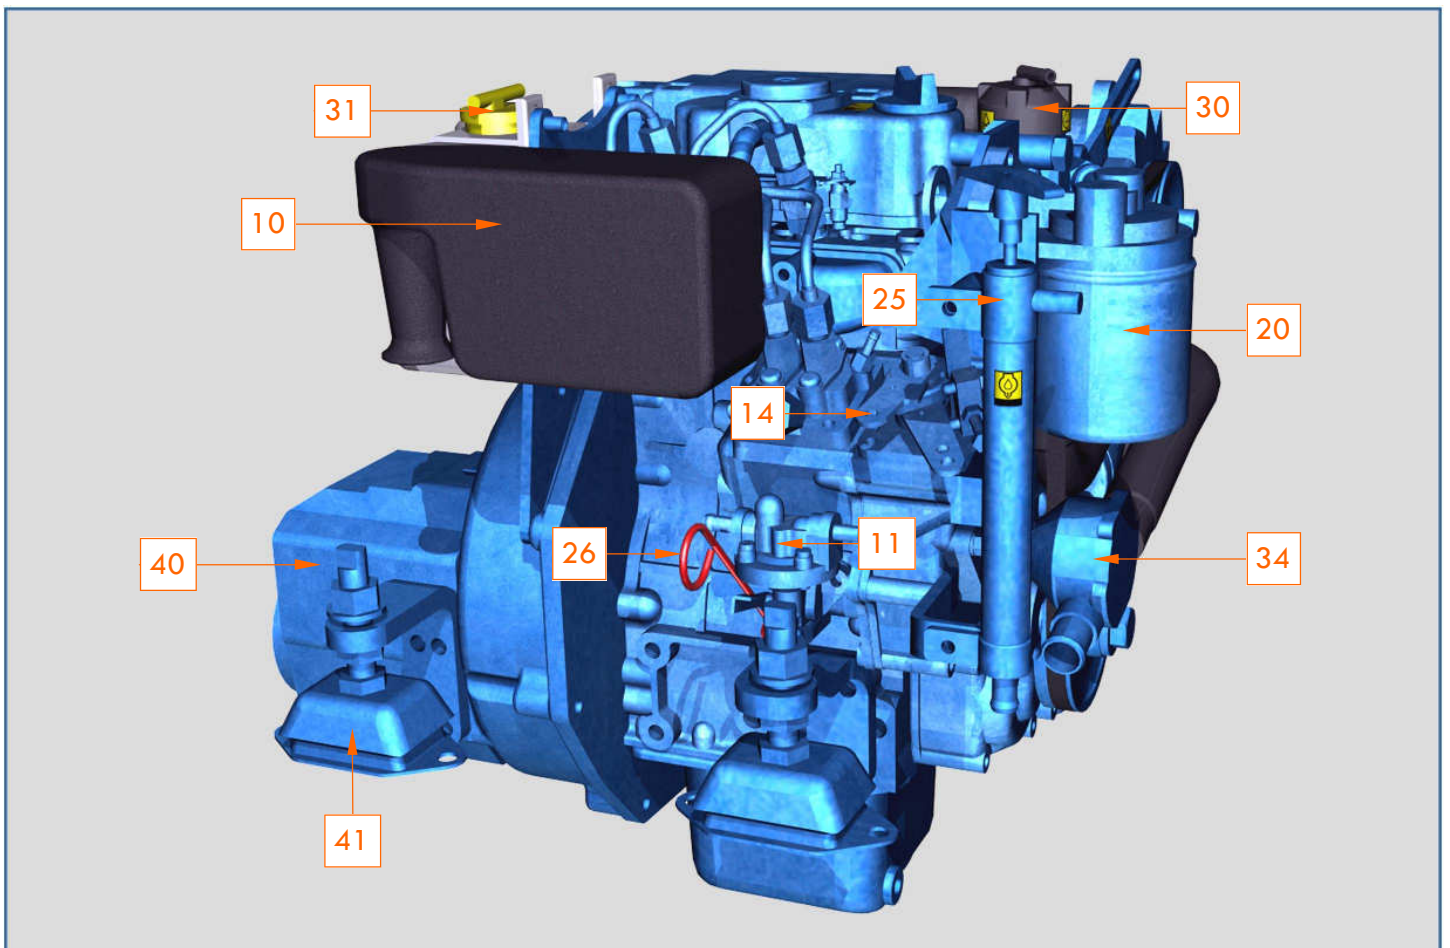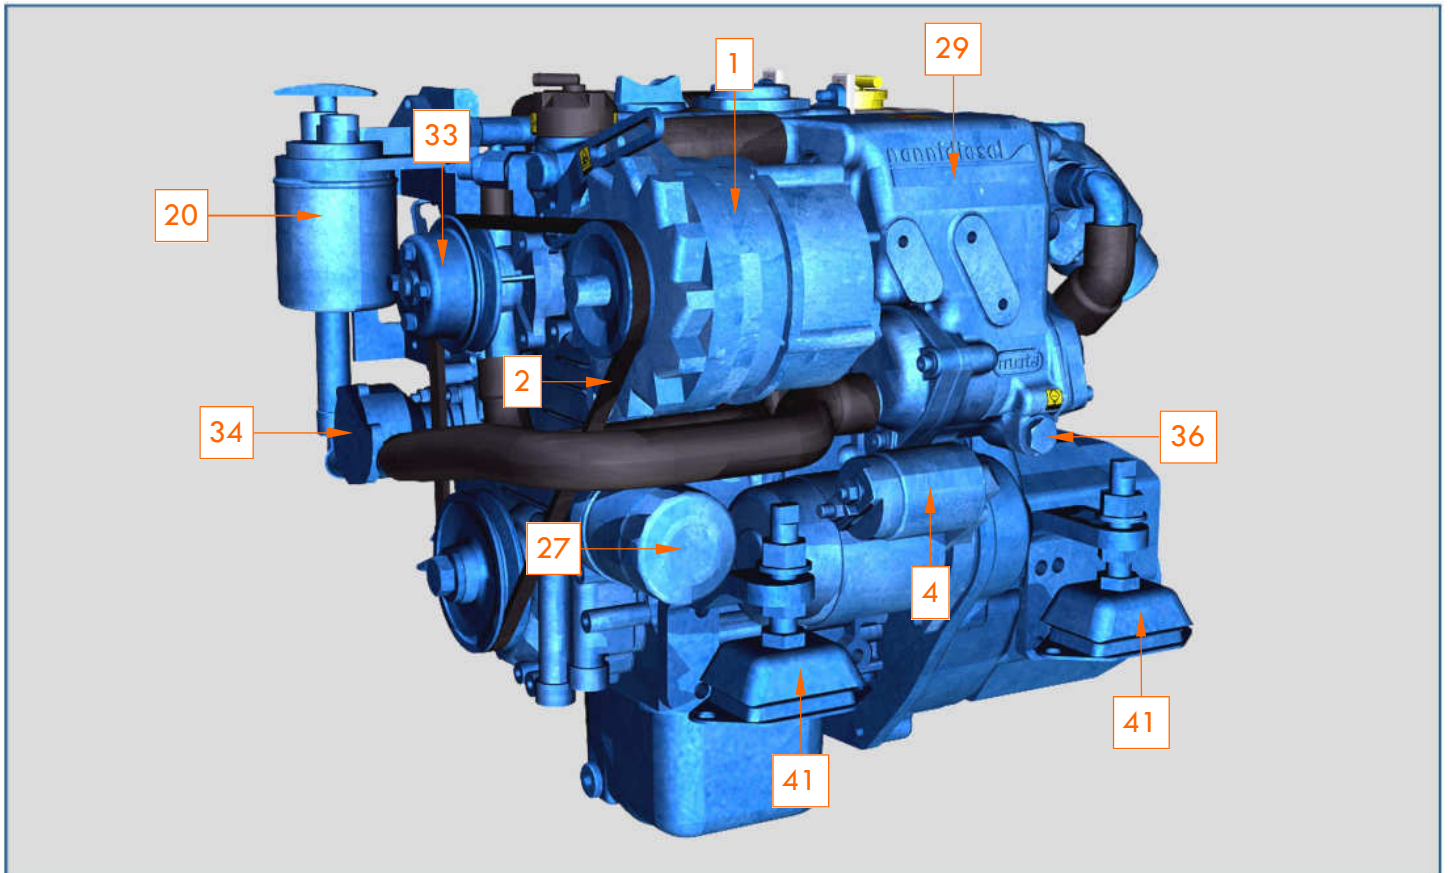

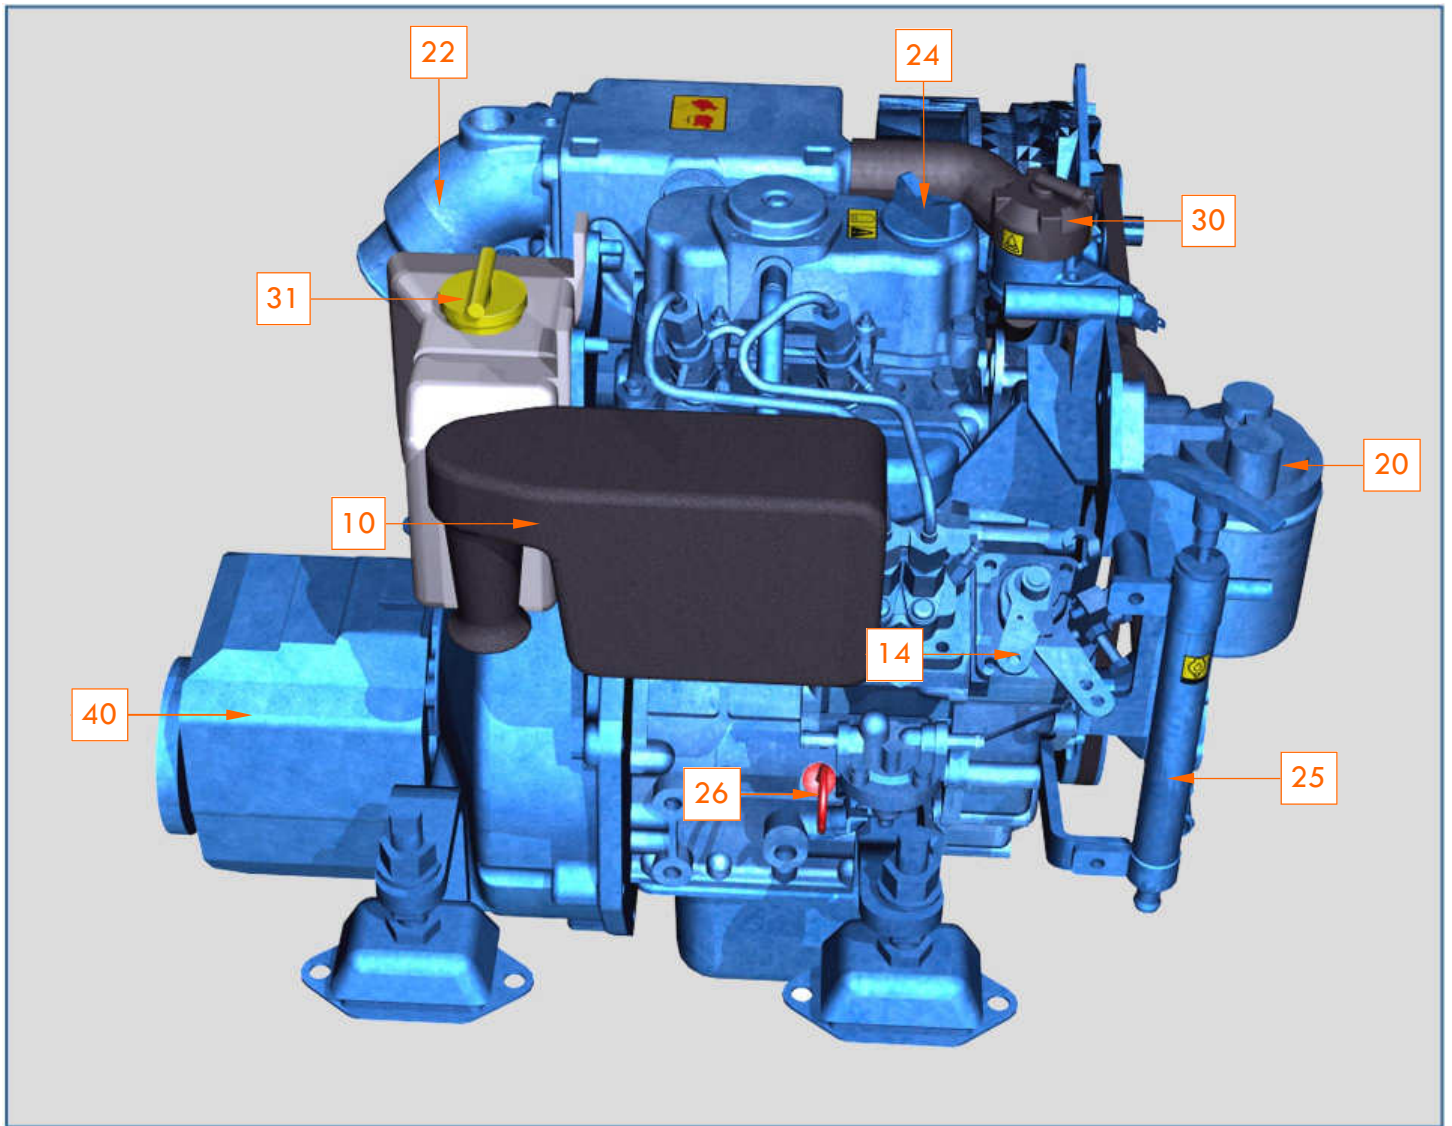


- |   |                                   |
|---|-----------------------------------|
| <b>1</b> - Alternator                     | <b>26</b> - Oil gauge             |
| <b>2</b> - Alternator belt                | <b>27</b> - Oil filter            |
| <b>4</b> - Starter                        | <b>29</b> - Heat exchanger        |
| <b>10</b> - Air filter                    | <b>30</b> - Coolant filler port A |
| <b>11</b> - Injection pump                | <b>31</b> - Coolant filler port B |
| <b>14</b> - Acceleration control          | <b>33</b> - Freshwater pump       |
| <b>20</b> - Fuel filter                   | <b>34</b> - Sea-water pump        |
| <b>22</b> - Water injection exhaust elbow | <b>36</b> - Exchanger drain plug  |
| <b>24</b> - Oil filler port               | <b>40</b> - Gearbox               |
| <b>25</b> - Oil pump                      | <b>41</b> - Flexible suspension   |

The components indicated in italics (water sensor and oil sensor) are optional equipment used with a more complete instrument panel.

The oil switch indicates a too low oil pressure in the engine on the alert indicator 5.  
Ref oil switch : 48 201 143

The water switch indicates a too high temperature of the coolant on the alert indicator 6.  
Ref water switch : 970 304 054

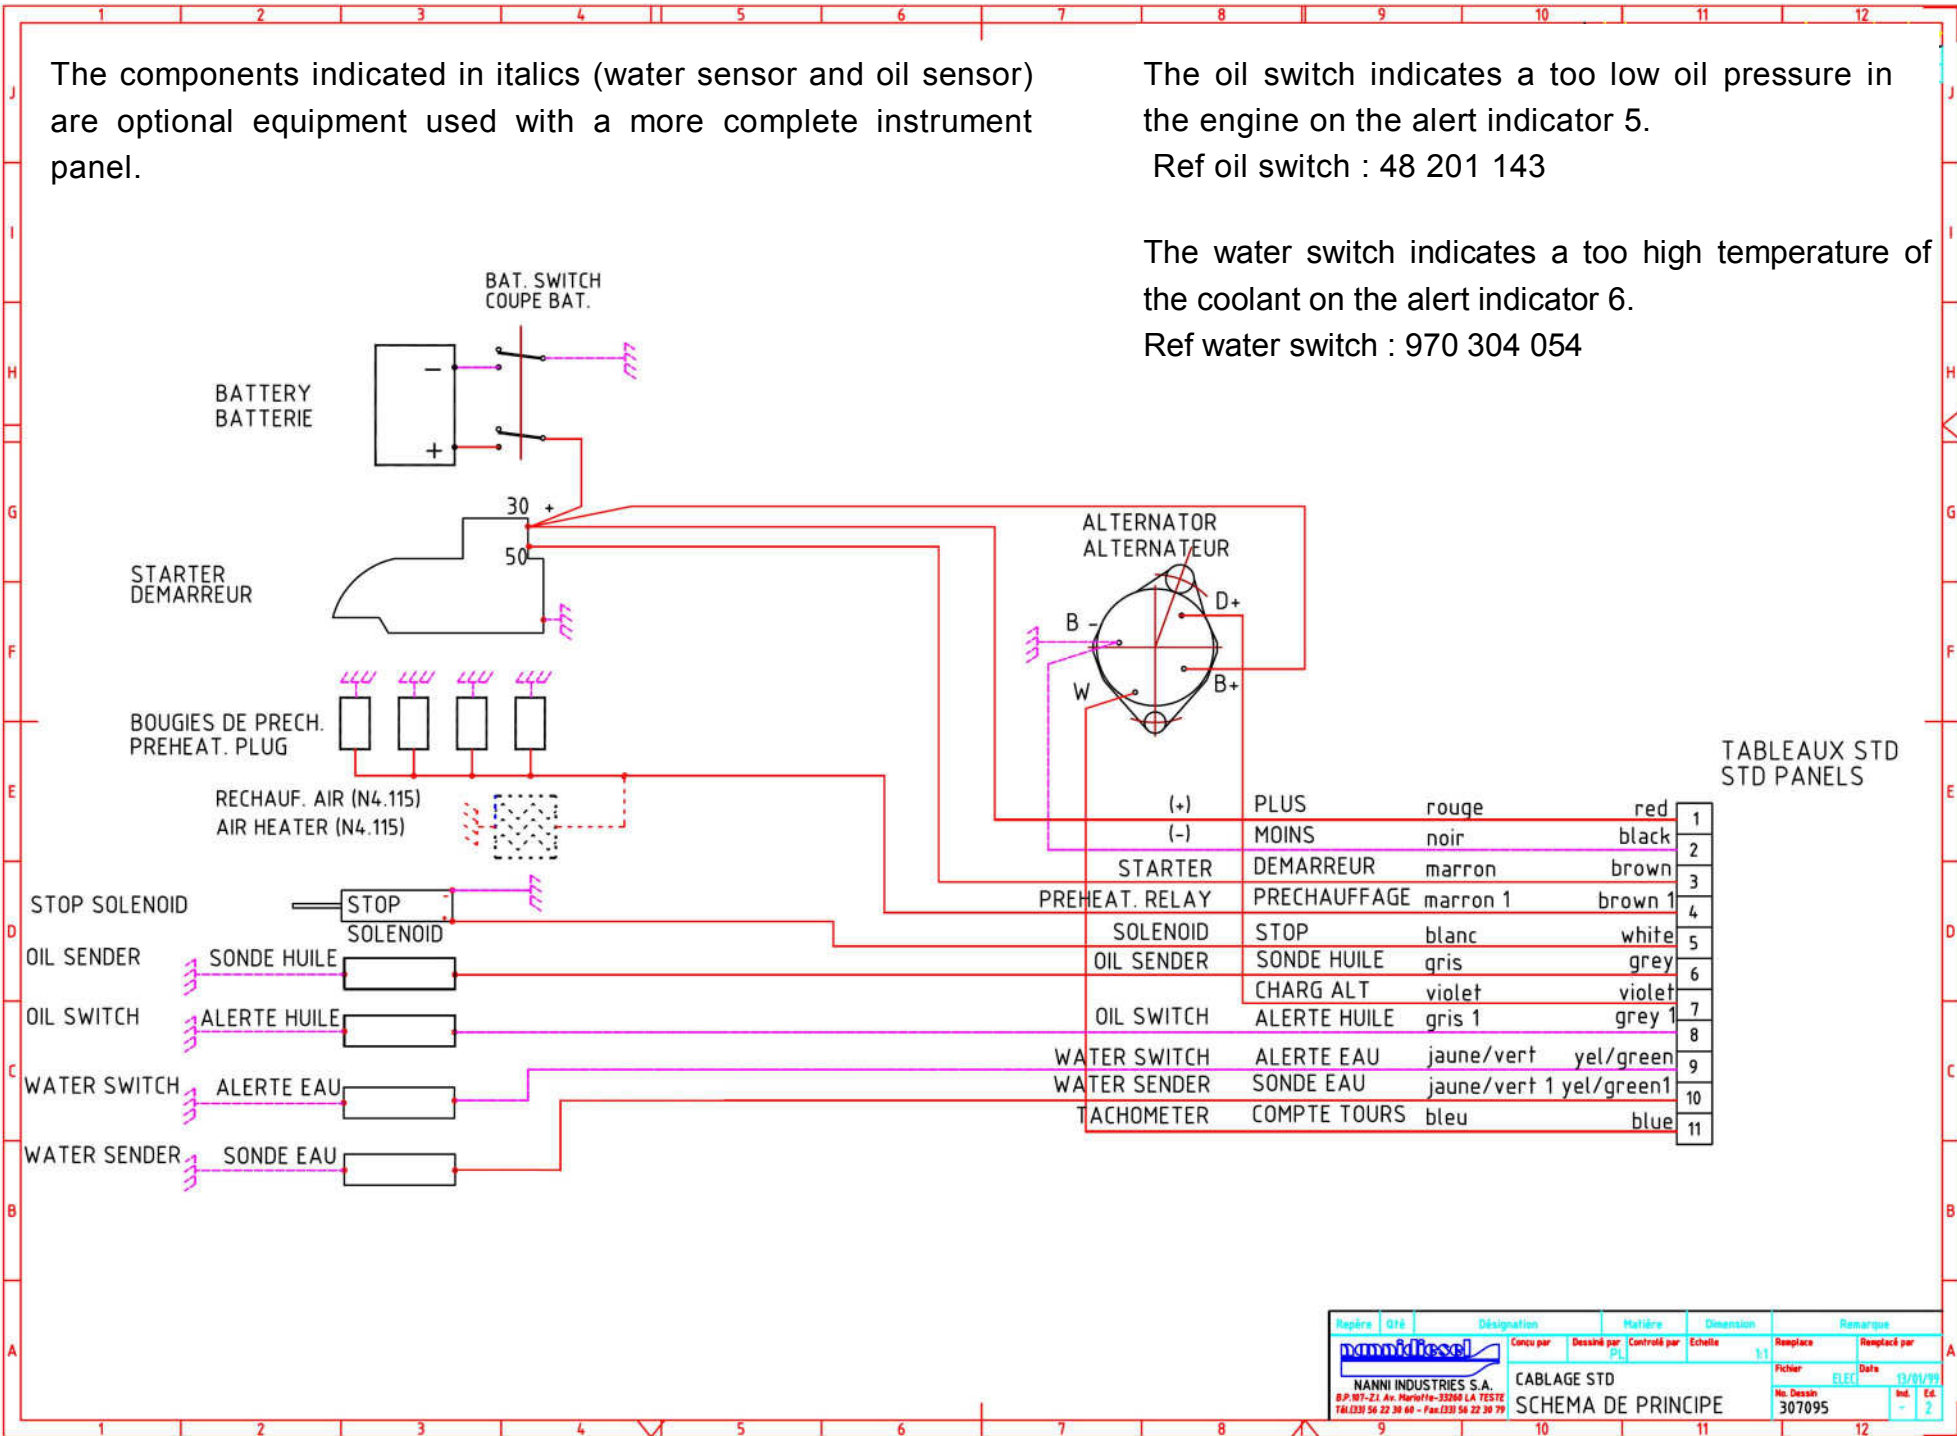




This section presents the various dashboards used to date with our marine engines. In the event of modification of the dashboards, we reserve ourselves the right to present new models in the appendices.


Some panels are not available with the whole range of engines.

**⚠** The instruments shown often consist of safety indicator lights. Take the necessary time to become familiar with these instruments and check them regularly when operating the engine.


**Eco3 panel**  
Dimensions 110 x 140 mm

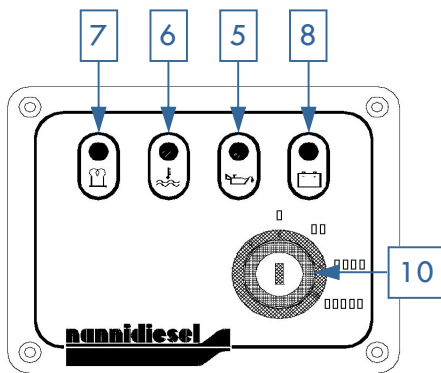


**A3 panel**  
Dimensions 205 x 120 mm

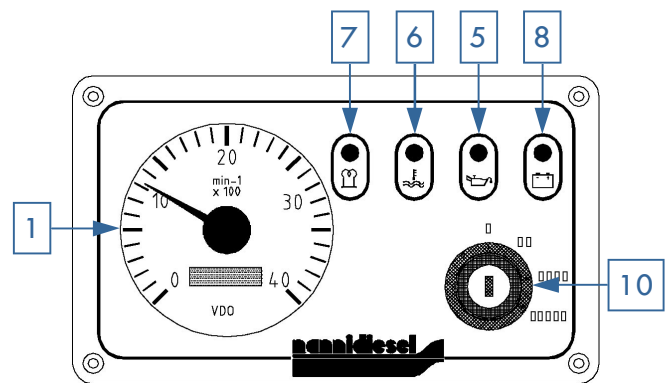

**B3 panel**  
Dimensions 220 x 145 mm

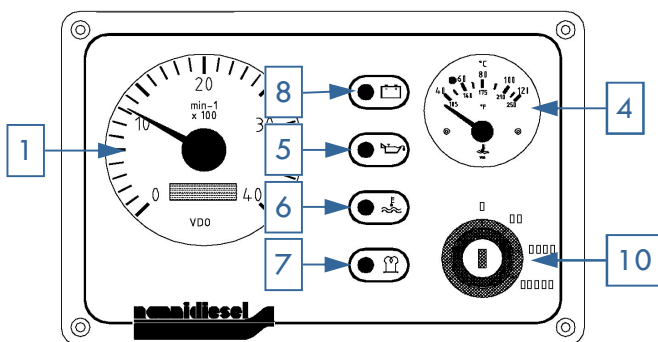


**Fly Bridge model**  
(example)

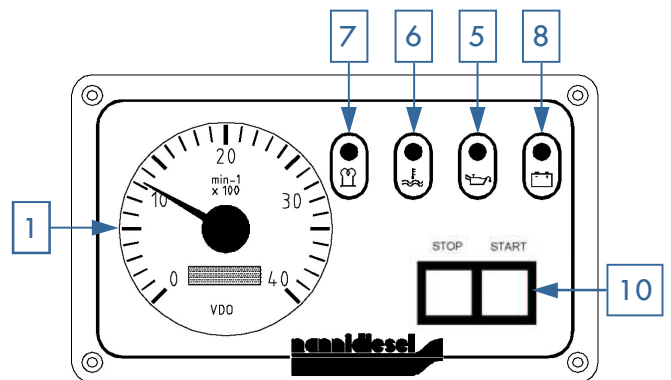

- 1 - Tachometer and hour meter
- 2 - Voltmeter
- 3 - Engine oil pressure
- 4 - Coolant temperature
- 5 - Low engine oil pressure

- 6 - High coolant temperature
- 7 - Preheating
- 8 - Battery charge
- 10 - Switch on / off

- Make sure that the drain plugs (block, heat exchanger) are closed
- Open the vent plugs and B (heat exchanger, clamp by-pass)
- Open the filler plug 30 and fill with the recommended liquid
- Close the vent plug when the liquid escape from it
- Finish the filling of the exchanger
- Close the filler plug
- Fill half the expansion chamber by the filler plug 31

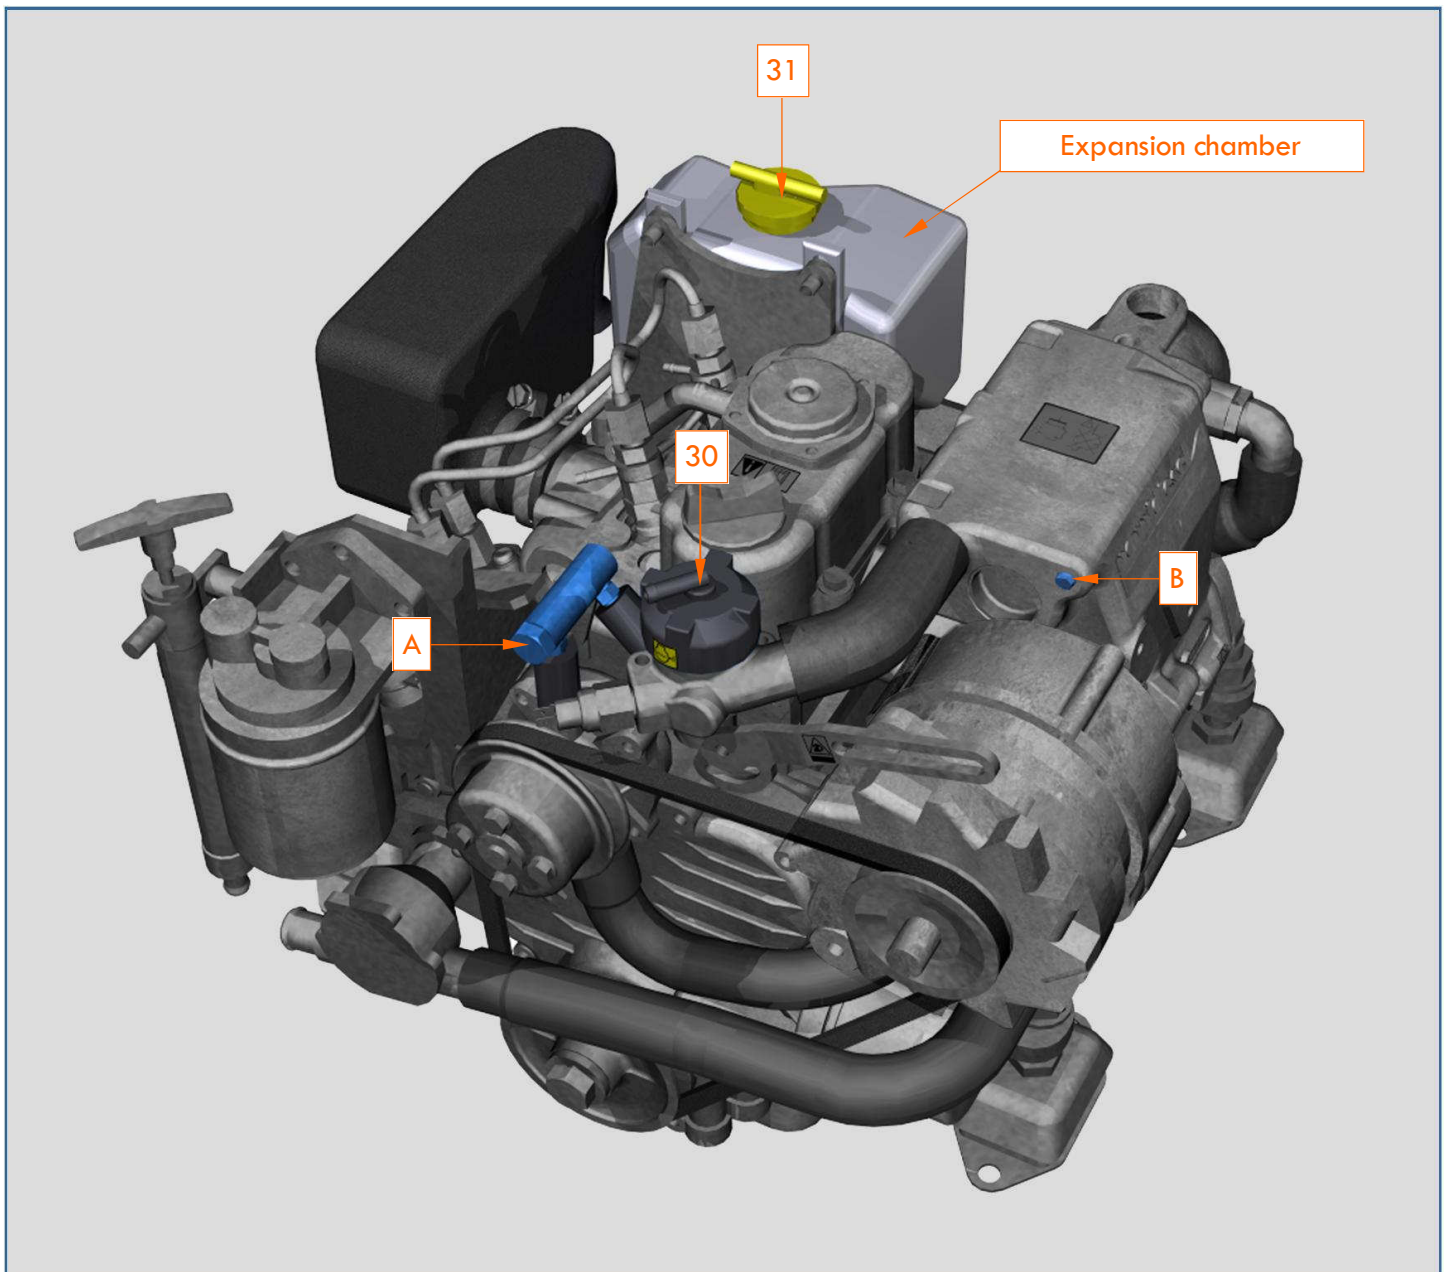

## Recommended on-board kit

Concerning the checks to be performed on installation (see chapter 4 on installation), you can order the installation documentation from NANNI INDUSTRIES.

### Alternator belt

Reference :  
48 108 138




### Engine oil filter

Reference :  
970 302 697



### Fuel filter

Reference :  
970 310 302

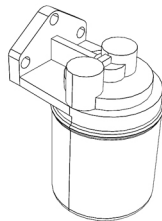

### Sea-water pump kit

Reference :  
970 307 749


#### Sea-water pump impeller

Reference :  
970 434 013

#### Sea-water pump gasket


Reference :  
970 504 028

Seal

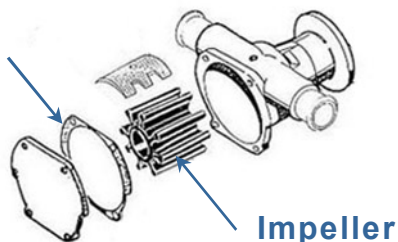

### Complete injector

Reference :  
970 307 587



### Injector seal

Reference :  
970 142 109



### Injector seal (O-ring)

Reference :  
970 307 388




### Glow-plug

Reference :  
970 307 591




### Air filter

Reference :  
970 301 330

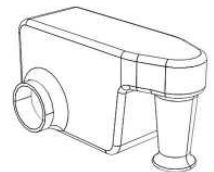

### Zinc Anode

Reference :  
970 494 635

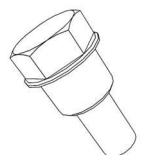

## **AFRICA**

ALGERIA  
EGYPT  
IVORY COAST  
MADAGASCAR  
MAURITANIA  
MOROCCO  
REUNION ISLAND  
SENEGAL  
SOUTH AFRICA  
TUNISIA

## **ASIA**

BAHREIN  
CHINA  
INDONESIA  
ISRAEL  
JAPAN  
SRI LANKA

## **AMERICA**

ARGENTINA  
BELIZE  
CANADA

## **CHILE**

CUBA  
ECUADOR  
GROENLAND  
GUADELUPE  
MARTINIQUE  
SAINT MARTIN  
U.S.A.:  
ANNAPOLIS  
MIAMI  
SAN FRANCISCO  
VENEZUELA

## **EUROPE**

BELGIUM  
CROATIA  
CZECH REPUBLIC  
DENMARK  
ESTONIA  
FAERO ISLANDS  
FINLAND  
GERMANY  
GREECE  
HUNGARY  
ICELAND

## **IRELAND**

ITALY  
LATVIA  
MALTA  
NETHERLANDS  
NORWAY  
POLAND  
PORTUGAL  
ROMANIA  
RUSSIA  
SLOVENIA  
SPAIN  
SWEDEN  
SWITZERLAND  
TURKEY  
UNITED KINGDOM

## **OCEANIA**

AUSTRALIA  
FRENCH POLINESIA  
NEW CALEDONIA  
NEW ZEALAND



**nannidiesel**

**energy in blue**

**World Wide Service**

NANNI INDUSTRIES S.A.S.

Zone industrielle - B.P.107 - 11, avenue Mariotte - 33260 La Teste - France

Tél.:33 (0) 5 56 22 30 60 - Fax: 33 (0) 5 56 22 30 79 -

Internet: [www.nannidiesel.com](http://www.nannidiesel.com) - E-mail: [contact@nannidiesel.com](mailto:contact@nannidiesel.com)