

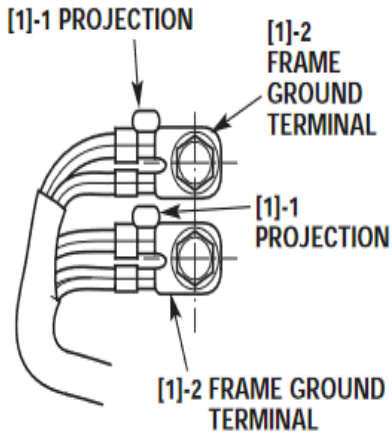
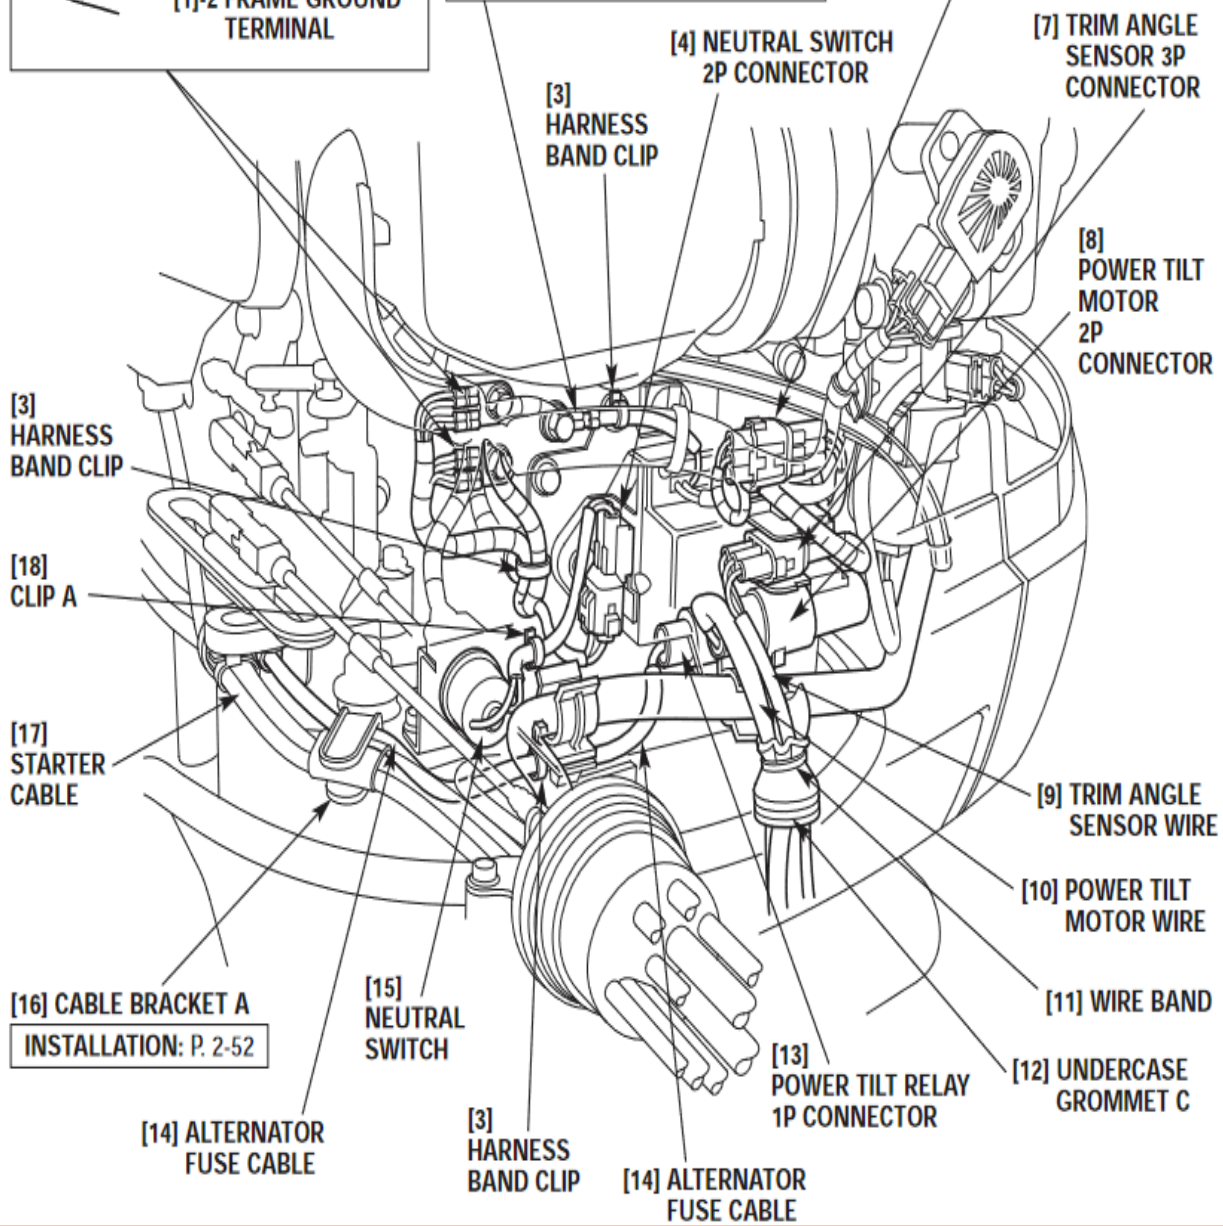


• Install by pushing the frame ground terminals against the corresponding projections on the crankcase.

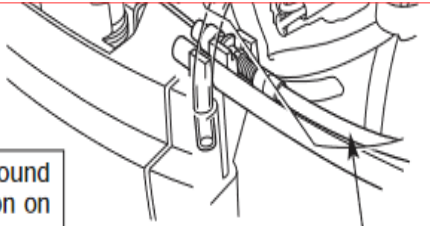

[2] POWER TILT RELAY GROUND TERMINAL

Install by pushing the ground terminal against the projection on the crankcase.

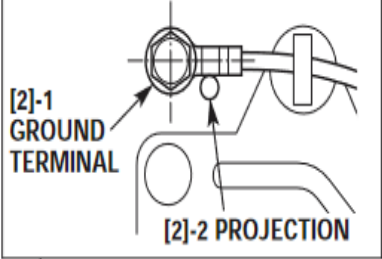

[16] CABLE BRACKET A
INSTALLATION: P. 2-52

