


Tacktick GPS Antenna



- NMEA Sentences received by Tacktick NMEA Interface**
- DBT - Depth
  - DPT - Depth
  - HDG - Heading
  - HDM - Heading
  - MWV - Wind Angle and Speed
  - MTW - Water Temperature
  - RMB - Cross Track Error and Waypoint information
  - RMC - Position, COG, SOG, Time
  - VHW - Heading and Speed
  - VLW - Distance (Log)

- NMEA Sentences transmitted by Tacktick NMEA Interface**
- DPT - Depth
  - GLL - Position\*
  - HDG - Heading
  - MTW - Water Temperature
  - MWV - Apparent Wind Angle and Speed
  - MWV - True Wind Angle and Speed
  - RMB - Cross Track Error and Waypoint information\*
  - RMC - Position, COG, SOG, Time\*
  - VHW - Heading and Speed
  - VLW - LOG and Trip distance
  - VWR - Apparent Wind Angle and Speed

**Optional External Alarm**

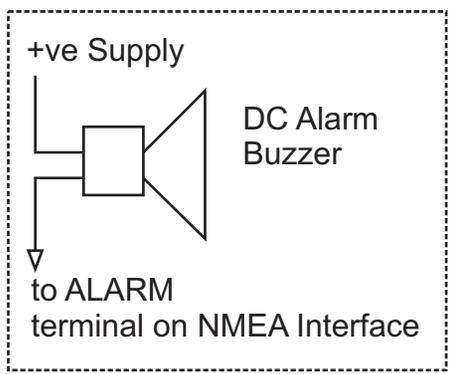

9 Pin D-Connector  
 Pin 2 - PC Receive Data +ve  
 Pin 3 - PC Transmit Data +ve  
 Pin 5 - Data Ground



\* These sentences are repeated when received on the NMEA output. No other sentences are repeated.

NOTE: Cable Colours may vary



<b>Subject:</b>	Tacktick NMEA Connections
<b>Ref.:</b>	
<b>Date:</b>	23rd January 2006
<b>Drawn by:</b>	Steve Moore